




SRC1 BASIC SYSTEM REMOTE CONTROL

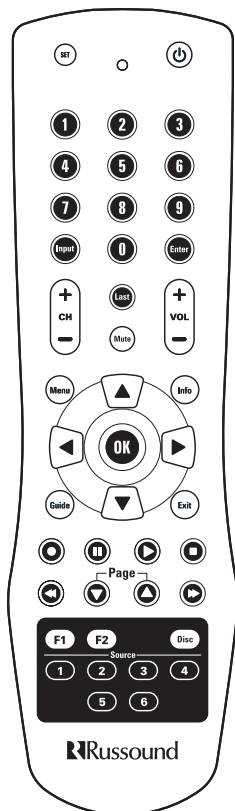

USER GUIDE

INTRODUCTION

The SRC1 Remote Control is designed for use with Russound controllers and keypads in CAA66, CAM6.6, CAV6.6 and RNET® systems. It controls up to six source components.

The SRC1 is a system remote only and does not support learning IR codes. This manual provides a basic overview on how to operate the SRC1.

KEY FUNCTIONS

Use the following Key Charts to learn how the SRC1 functions.

The **LED** (red light) blinks to show that the remote control is working and is sending signals.

Press **PWR** once to turn on or off the zone.

Use the keypad (**0 ~ 9**) to directly select channels (for example, 09 or 31).

Press **MUTE** once to turn sound off or on.

Press **ENTER** once after entering channel numbers on some TV models.

Use **VOL +** (or **VOL -**) to raise (or lower) the sound volume.

Use **CH +** (or **CH -**) to select the next higher (or lower) channel.

Press **LAST** once to recall the last channel and to page back one screen in the main menu.

Press **INPUT** once to switch the input of the chosen component.

Use **GUIDE** to display the program guide.

Use **EXIT** to exit out of the selected component's menu or guide.

Use **F1/F2** to select and save favorite presets.

Use the cursor keys to move the cursor in the program guide and menu screens.

Press to choose the highlighted menu option. Performs "Enter" function for devices.

Use **DISC** for direct disc selection.

Use **INFO** to display current channel and program information.

Press **MENU** to access the menu of your chosen component.

Use the transport keys to control your components.



Use Page Up/Down with cable or satellite boxes.



Use these keys to select specific sources.

INSTALLING BATTERIES

1. On the back of the SRC1, push the tab and lift off the battery cover.
2. Obtain two (2) fully-charged AA alkaline batteries. Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the new batteries.
3. Press the battery cover back into place. The tab should click when the cover is locked.
4. Test the unit by pressing **PWR** and any key. If the batteries are inserted correctly, the LED will blink once.

TROUBLESHOOTING

PROBLEM: LED does not blink when you press a key.

SOLUTION: Replace the batteries with two (2) new AA alkaline batteries.

PROBLEM: LED blinks when you press a key, but home entertainment component does not respond.

SOLUTION: Make sure the SRC1 is aimed at your controller system keypad and is not farther than 15 feet away.

PROBLEM: Changing channels does not work properly.

SOLUTION: If original remote control required pressing ENTER to change channels, press **ENTER** on the SRC1 after entering the channel number.

ADDITIONAL INFORMATION

The SRC1 does not have any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to the SRC1.

Copyright ©2005 Russound, Inc.

Russound
5 Forbes Road
Newmarket NH 03857
603.659.5170

www.russound.com

28-1205 07/08/05